

Annexure A

Help Manual for Login in VTMS.


1. Type <https://tracking.keralamvd.gov.in> in browser. The following screen appears.



The screenshot shows a web browser window with the address bar displaying <https://tracking.keralamvd.gov.in>. The main content area features a map of a city street with a white login box overlaid. The login box has the following elements:

- Logo:** A logo with two hands holding a red location pin, with the text "SURAKSHA - MITR" below it.
- Username:** A text input field labeled "Username".
- Password:** A text input field labeled "Password".
- Captcha:** A text input field labeled "Captche" with the value "349 06" and a refresh icon.
- Login Button:** A green button labeled "Login".
- Forgot Password:** A blue link labeled "Forgot Password".

2. Login with **username** and **password**. Username is your SPARK PEN No and default password is also your SPARK PEN No (Eg:-134824). On logging, you will be prompted to change the current password.

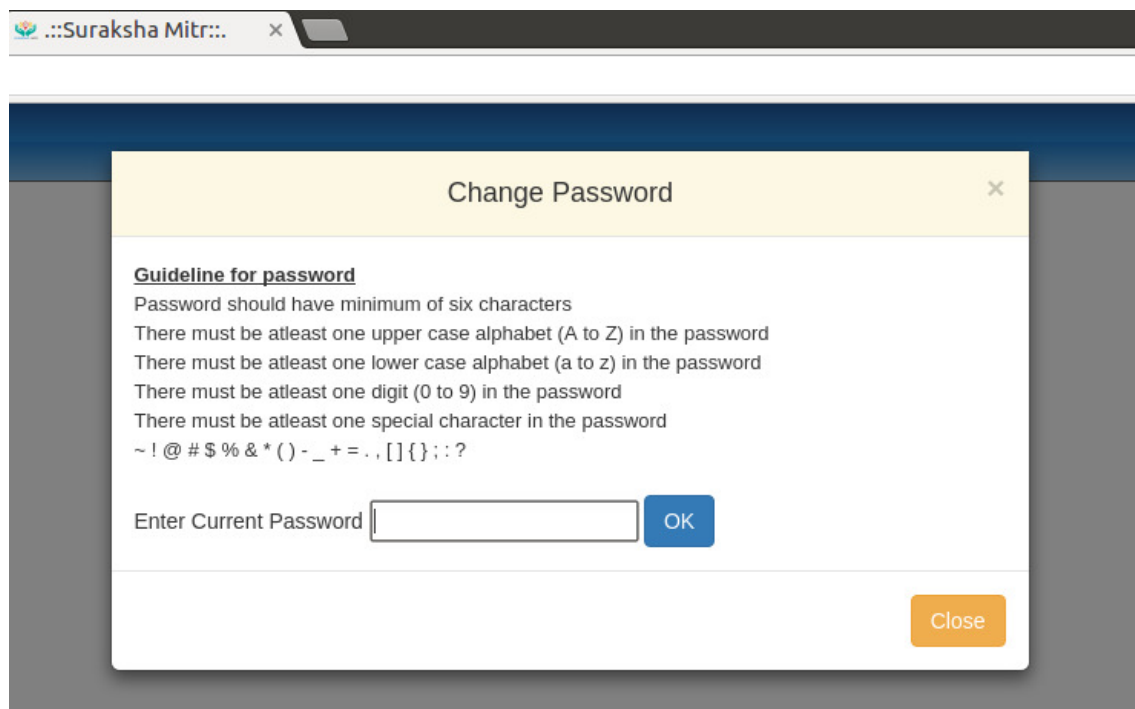

The screenshot shows a web browser window with the address bar displaying <https://tracking.keralamvd.gov.in>. The main content area features a map of a city street with a white login box overlaid. The login box has the following elements:

- Username:** A text input field labeled "Username".
- Password:** A text input field labeled "Password".
- Captcha:** A text input field labeled "Captche" with the value "349 06" and a refresh icon.
- Login Button:** A green button labeled "Login".
- Forgot Password:** A blue link labeled "Forgot Password".

The screenshot shows a web browser window with the address bar displaying <https://tracking.keralamvd.gov.in>. The main content area features a map of a city street with a white login box overlaid. The login box has the following elements:

- Username:** A text input field labeled "Username".
- Password:** A text input field labeled "Password".
- Captcha:** A text input field labeled "Captche" with the value "349 06" and a refresh icon.
- Login Button:** A green button labeled "Login".
- Forgot Password:** A blue link labeled "Forgot Password".

Change Password

Guideline for password

Password should have minimum of six characters

There must be atleast one upper case alphabet (A to Z) in the password

There must be atleast one lower case alphabet (a to z) in the password

There must be atleast one digit (0 to 9) in the password

There must be atleast one special character in the password

~ ! @ # \$ % & * () - _ + = . , [] { } ; : ?

New Password

Retype Password

Security Question

--Select--

Answer

Confirm Answer

OK

Close

3. After changing password, login with **username** and **new password**. Please check your details in the profile page.

Settings

Gmail

Suraksha Mitr::

https://tracking.keralamvd.gov.in

Session out in 14:51

135137

Help(F2)

Applications

Map

Master data

VTU Tagging

VTMS / Map / Tasks / Vehicle Tracking - Control Room

Moving Halt Sleep Over Speed Critical

Edit Profile

Change Password

Change MobileNo


Sign Out

8

Off

Map of Kerala showing districts: Wyanad, Kozhikode, Malappuram, Palakkad, Thrissur, Ernakulam

4. You can check and edit your details by clicking the **Edit Profile** menu.

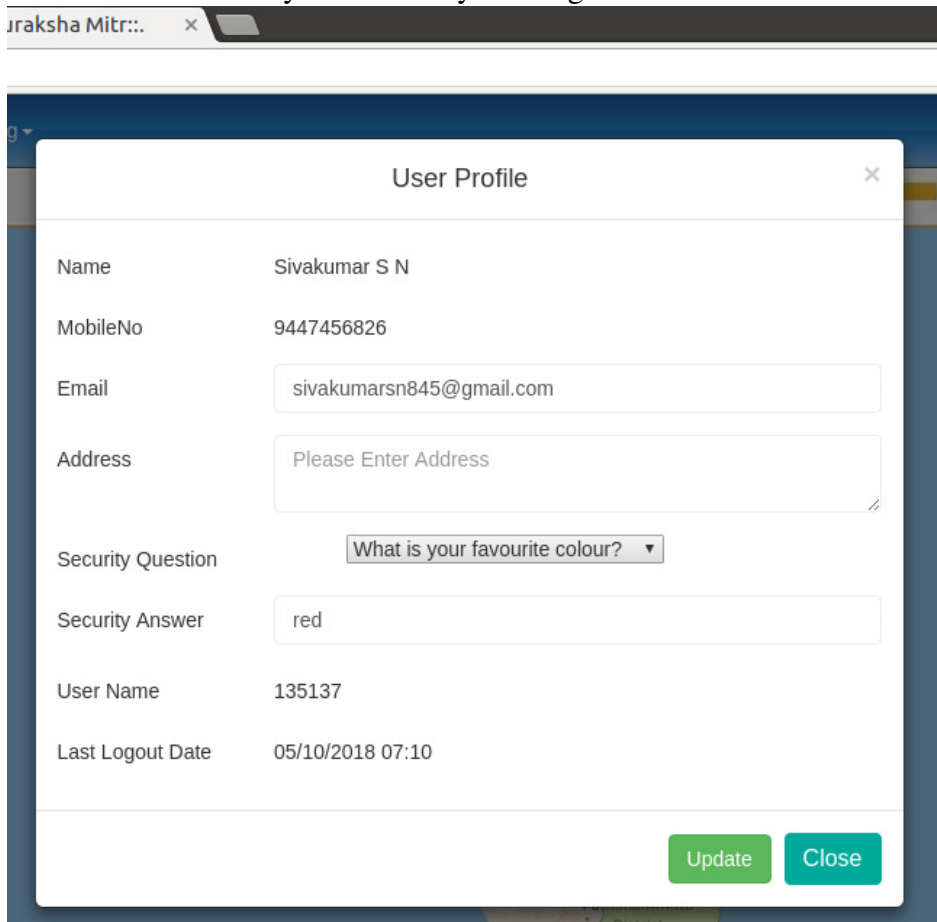


The screenshot shows a web browser window with a tab titled "Praksha Mitra:". Below the browser window is a "User Profile" dialog box. The dialog box contains the following fields and values:

Field	Value
Name	Sivakumar S N
MobileNo	9447456826
Email	sivakumarsn845@gmail.com
Address	Please Enter Address
Security Question	What is your favourite colour?
Security Answer	red
User Name	135137
Last Logout Date	05/10/2018 07:10

At the bottom right of the dialog box are two buttons: "Update" (green) and "Close" (teal).

Please verify name, mobile no, email and user name. If necessary, you may update email, security question and security answer and Address. Any changes needed in Name, Mobile No, User Name shall be informed to Transport Commissionerate at tcoffice@keralamvd.gov.in or smartenforcement@gmail.com with details.

5. You can change the password by clicking the **Change Password** menu.

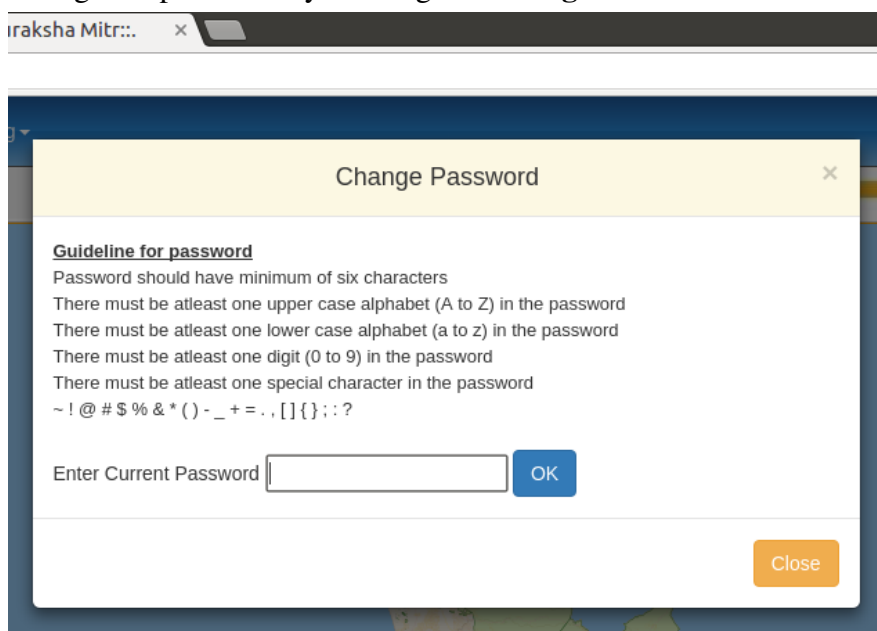

The screenshot shows a web browser window with a tab titled "Praksha Mitra:". Below the browser window is a "Change Password" dialog box. The dialog box contains the following text and fields:

Guideline for password


- Password should have minimum of six characters
- There must be atleast one upper case alphabet (A to Z) in the password
- There must be atleast one lower case alphabet (a to z) in the password
- There must be atleast one digit (0 to 9) in the password
- There must be atleast one special character in the password

~ ! @ # \$ % & * () - _ + = . , [] { } ; : ?

Enter Current Password


6. You can change the mobile no by clicking the **Change Mobile No** menu.

7. On

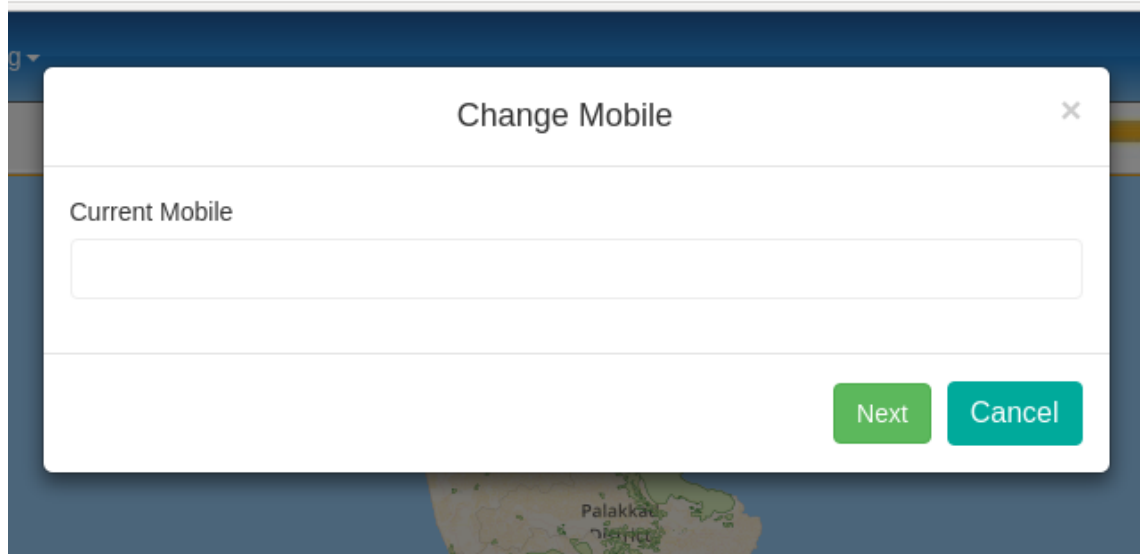

The screenshot shows a web browser window with the title 'Suraksha Mitra:..'. A modal dialog box titled 'Change Mobile' is displayed in the center. The dialog has a close button (X) in the top right corner. Inside the dialog, there is a label 'Current Mobile' above a text input field. At the bottom right of the dialog, there are two buttons: 'Next' (green) and 'Cancel' (teal). The background of the browser window shows a map of Kerala with the label 'Palakkad District' visible.

login, the main window will be displayed as given below:-

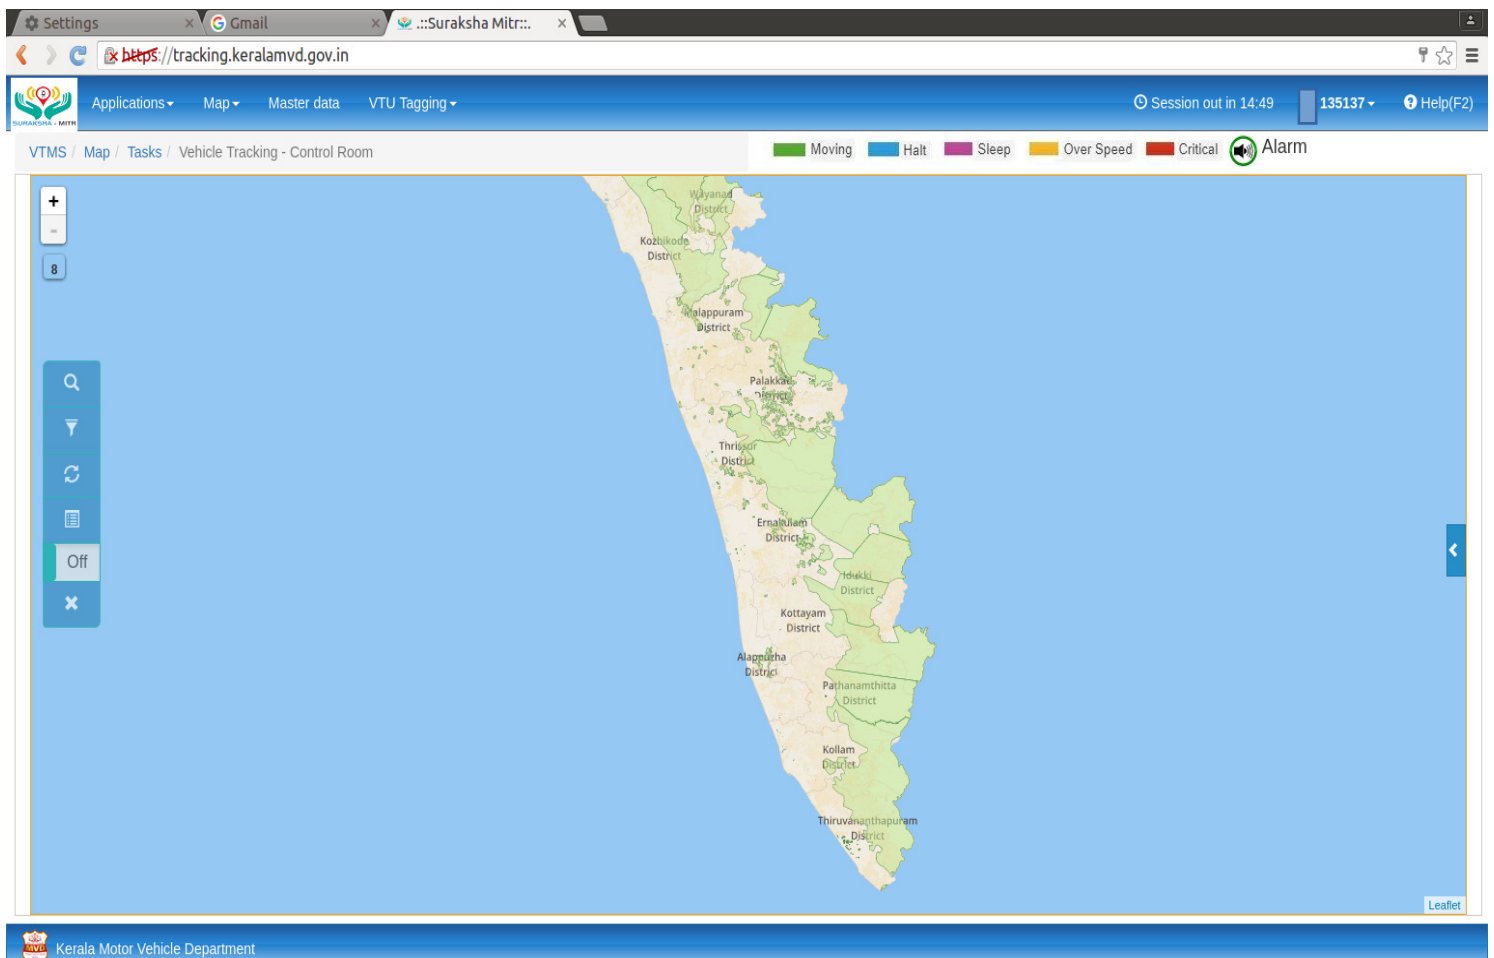

For more help, you may check the Help Manual (Click F2) available.

The screenshot shows a web browser window with the URL <https://tracking.keralamvd.gov.in/#>. The page features a blue header with navigation links: Applications, Map, Master data, and VTU Tagging. A session out timer shows 14:35 and a user ID of 135137. The main content area has a large image of a highway with cars and the text "GPS based Vehicle Tracking and Management System". Below this, there are two columns of information. The left column, titled "Public Safety in SURAKSHA-MITR", lists: "Panic buttons in all transport vehicles", "4 panic button in stage carriages", and "Tilt & impact sensors". The right column, titled "SURAKSHA-MITR Components", lists: "Tracking Platform", "Map building Platform", and "Hardware Infrastructure at Data Centre". A central image shows a yellow vehicle with a red "STOP" button.

**PROFORMA TO BE FORWARDED FOR CREATION OF USERID IN
VEHICLE TRACKING MANAGEMENT SYSTEM**

NAME OF OFFICE:-

PEN NO	NAME	DESIGNATION	MOBILE NO	EMAIL ID

You can watch help video on procedure for tagging approval is uploaded in youtube.

VLT approval: <https://youtu.be/Ew2IzKGcITo>

Annexure B

മോട്ടോർ വാഹന വകുപ്പ്

റീജിയണൽ ട്രാൻസ്പോർട്ട് ഓഫീസ്/സബ് റീജിയണൽ ട്രാൻസ്പോർട്ട് ഓഫീസ്

നോട്ടീസ്

സർ,

വിദ്യാഭ്യാസ സ്ഥാപനങ്ങളിലെ വാഹനങ്ങളുടെയും, വിദ്യാർത്ഥികളുടെയും സുരക്ഷിതത്വവും പൊതുവായി റോഡ് സുരക്ഷയും ഉറപ്പാക്കുന്നതിന് മോട്ടോർ വാഹന വകുപ്പ് തയ്യാറാക്കിയിട്ടുള്ള വാഹന നിരീക്ഷണ സംവിധാനമായ സുരക്ഷാമിത്രയുമായി ഈ വാഹനം VTU വഴി ബന്ധിപ്പിച്ചിട്ടുള്ളതായി കാണുന്നില്ല.

ഈ സംവിധാനം അടിയന്തിരമായി ഘടിപ്പിച്ച് വാഹനം സുരക്ഷാമിത്രയിൽ ഉൾപ്പെടുത്തുന്നതിനായി വേണ്ട നടപടികൾ താമസംവിന സ്വീകരിക്കേണ്ടതാണ്.

മോട്ടോർ വെഹിക്കൾസ് ഇൻസ്പെക്ടർ

വാഹന രജിസ്ട്രേഷൻ നമ്പർ:

ഉടമയുടെ വിലാസം:

ഡ്രൈവറുടെ പേര്:

ഒപ്പ്:

Annexure C

Suraksha Mitr: Guidelines for MVI Inspection and Approval

1. Device നേരെയാണ് install ചെയ്തിരിക്കുന്നത് എന്ന് ഉറപ്പ് വരുത്തുക. ചരിച്ചോ തൂക്കിയിട്ടിരിക്കുകയോ ആകരുത്.
2. Wiring harness AIS-140 പ്രകാരമുള്ളതാണെന്ന് ഉറപ്പ് വരുത്തുക.
3. പാനിക് ബട്ടണുകൾ യഥാസ്ഥാനത്ത് പിടിപ്പിച്ചിട്ടുണ്ടെന്ന് ഉറപ്പ് വരുത്തുക.
4. Physical Inspection സമയത്ത് പാനിക് ബട്ടൺ അമർത്തി നോക്കുകയും, buzzer/hooter പ്രവർത്തിക്കുന്നുണ്ടെന്ന് ഉറപ്പ് വരുത്തുകയും ചെയ്യുക.
5. ഇങ്ങനെ ON ആകുന്ന emergency, approval സമയത്ത് SurakshaMitr application വഴി off ആക്കുക . അതിന് യഥാസമയം emergency off application ൽ കിട്ടി എന്ന് ഉറപ്പു വരുത്തുക.
6. Emergency off സമയത്ത് വണ്ടിയ്ക്കുള്ളിലെ buzzer off ആയി എന്ന് ഉറപ്പ് വരുത്തുക.
7. Approval സമയത്ത് map ൽ കാണിയ്ക്കുന്ന സ്ഥലം വണ്ടി കിടക്കുന്ന സ്ഥലം തന്നെയാണെന്ന് ഉറപ്പ് വരുത്തുക.
8. അതിനു ശേഷം യാതൊരു വിധത്തിലുള്ള critical alert കളും application ൽ എത്തിയിട്ടില്ല എന്ന് ഉറപ്പ് വരുത്തുക.
9. RC ബുക്കും, Installation Certification ഉം application ൽ കാണിക്കുന്ന Informationഉം ആയി ഒത്തു നോക്കി ശരിയാണെന്ന് ഉറപ്പ് വരുത്തുക.
10. ഇതിനുശേഷം മാത്രം Approval കൊടുക്കുക.
11. Approval കൊടുക്കുന്ന സമയം മുതൽ വണ്ടിയുടെ ലൊക്കേഷൻ Control room view ൽ ലഭ്യമായിരിക്കും.